



Cassette Installation Instructions

Mount the brackets to the wall or window frame with the outside brackets no further than 2 inches (5cm) from the ends of the headrail. On wider shades (60 inches and over), space the additional bracket(s) at equal intervals. Two brackets are included for widths under 60 inches; over 60 inches, three brackets are included for mounting.

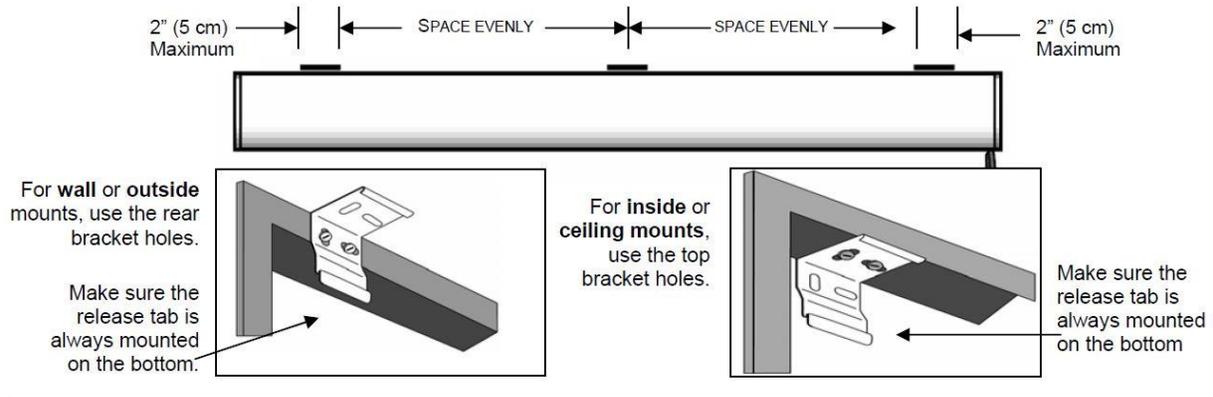


Mount the headrail. Position the headrail with the front panel. (A) resting on the top lip of all brackets. Push the bottom front of the headrail firmly backwards and toward the window until the lip on the rear of the headrail engages the bracket and snaps into place, (B) as shown Push here backwards and toward the window.

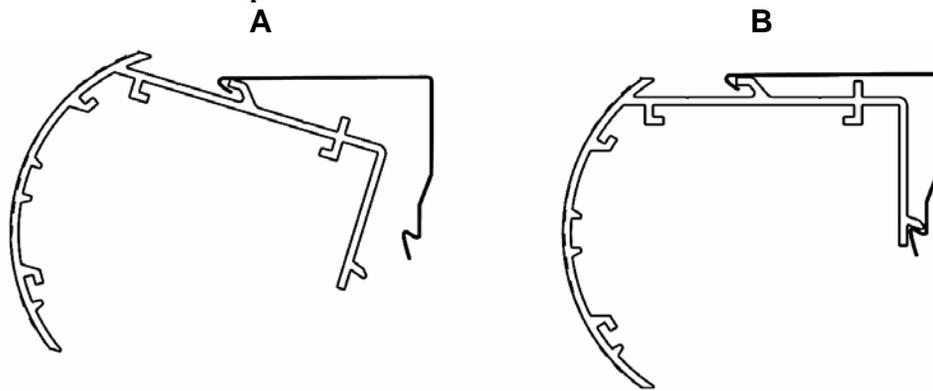

3. Install the Tension Device. The Tension Device reduces the hazards of strangulation and entanglement of young children by limiting access to the control cord. Anchor the Tension Device that is attached to the shade's control cord to the window frame or wall so young children cannot pull the cord around their necks.



- A.** Lower the shade.
B. Hold the Tension Device on the window frame, molding or wall so that the Tension Device and control cord do not interfere with raising or lowering the shade. The Tension Device should be installed without stretching or pulling down on the control cord. Stretching the cord will cause excessive wear. Do not twist or cross the control cord. If using stop balls, position the Tension Device 1/4 inch higher to allow the stop ball to pass thru the Tension Device.
C. Holding the Tension upright, and in position as shown, insert and secure the screw.

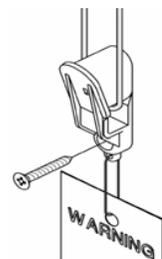

4. Operate the shade by pulling down on one side of the cord – one side of the cord raises the shade, the other side lowers the shade. Do not lift the bottom rail with your hands. Also, be careful not to place objects on the windowsill that will interfere with operating the shade or cause it to hang unevenly.

5. To remove a shade, roll the shade material into the headrail, push on the bottom of the bracket release tabs and with a firm grasp of the headrail, push upwards and then remove the shade.